
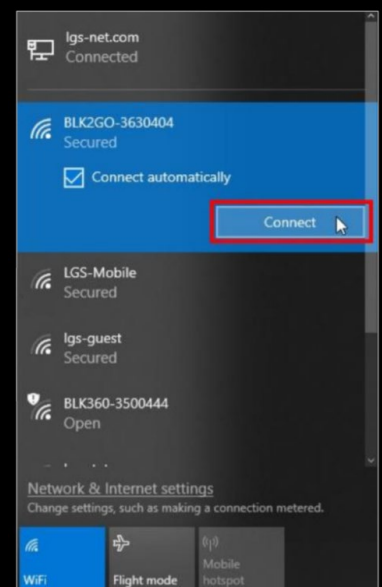
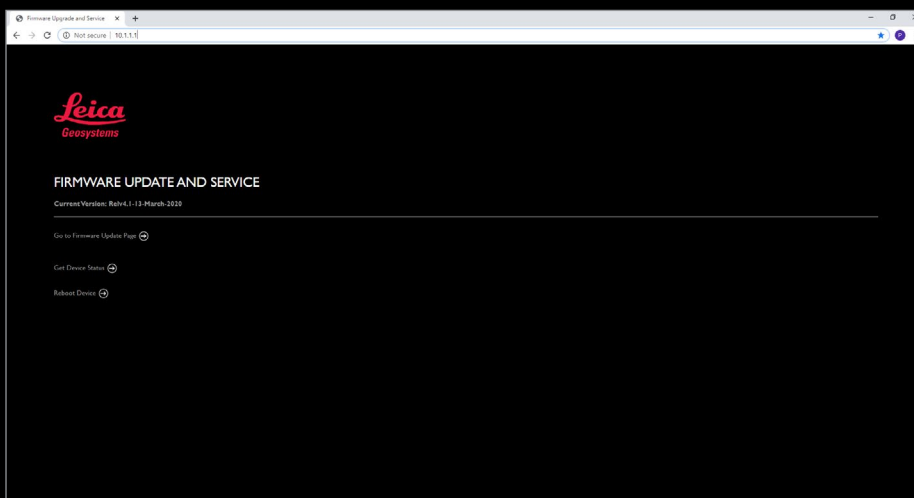




BLK2GO FIRMWARE

HOW TO INSTALL NEW FIRMWARE

- Check out the current firmware version. On the BLK2GO Live app: Under Status > More details > BLK2GO Version: Package
- Download the firmware from the official web page:
<https://shop.leica-geosystems.com/blk2go-firmware>
 Or from myWorld @ Leica Geosystems customer portal:
<https://myworld.leica-geosystems.com>
- Start the BLK2GO
 - Insert a fully charged battery
 - Press the power button and wait for the BLK2GO to be ready (LED continuous green)
- Connect your computer to the BLK2GO WiFi
 (Note: the firmware can only be installed using WiFi.)
- Open a browser and type 10.1.1.1

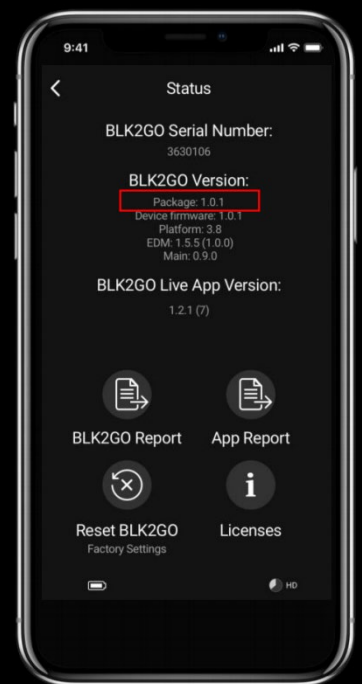

- Go to Firmware Update Page and follow the steps:
 - Select the zip file (do not unzip it)
 - Upload it
 - Update

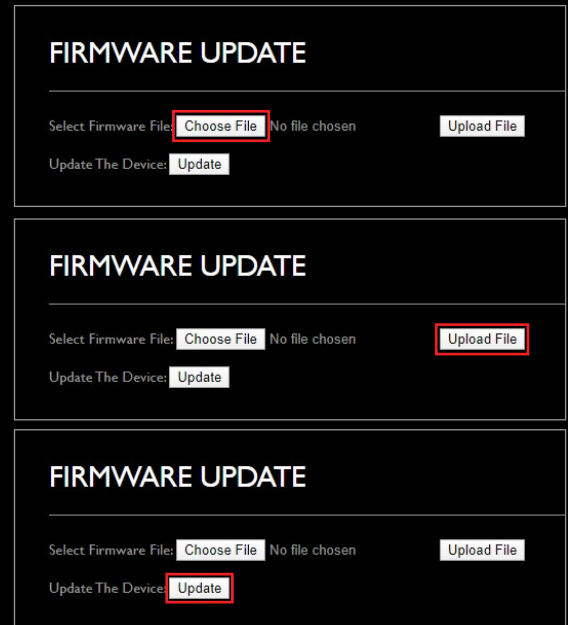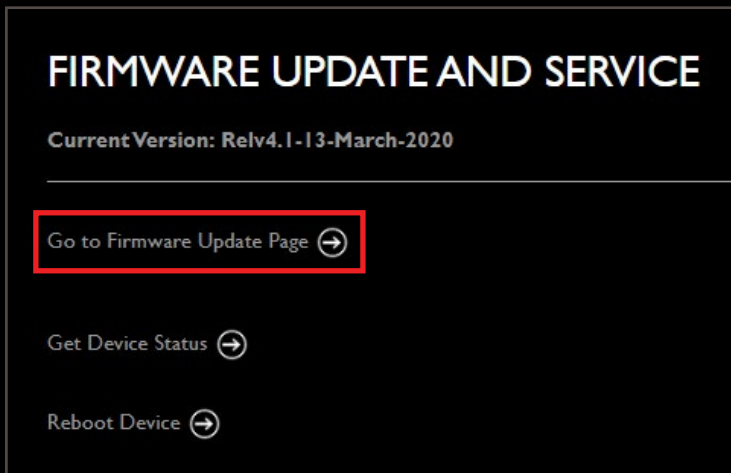

- The BLK2GO starts blinking yellow
- After 10-15 minutes the LED of the BLK2GO will turn solid green. The upgrade has finished successfully.